

Parts Manual

Thank you for choosing the Tubeline Bale Retriever. We know that it will give you many years of productive service. This front mounted machine is designed to gather small square bales into a large pack for easy transportation and storage.

Parts Manual Usage

This parts manual is used to order replacement parts by means of part breakdowns and their corresponding part lists. Each page contains a different range of integrated parts. Each illustration visually represents machine components. The part lists contain information needed to order replacement parts. Part lists include the following columns:

ITEM - Number matching parts breakdown balloons.

QTY - Quantity of components included in this breakdown, not entire machine.

PART NUMBER - The number to be used when placing an order.

DESCRIPTION - Term used to confirm its matching part number.

NOTE - Column may be added to part lists when a serial break or additional information is required.

Remember to always have your machine model and serial number on hand when ordering parts.

Part Orders

Part orders are taken by your local Tubeline dealer and fulfilled through a regional distributor. For quick service please record your dealer name and contact information in the *Serial Number* section.

Manuals

Parts manuals are printed and shipped with machines as they leave the manufacturer. Your machine may include parts or features not yet included in the initially shipped manual. The latest manual version can be found at *www.tubeline.ca/support.php*. Tubeline reserves the right to update and change manuals as seen fit. Dealers are informed of any pressing changes/ modifications. They can help you with any questions regarding replacement parts and proper operating procedures.

Serial Number

The implement serial number is located on the upper rear right corner of the frame. This number helps us to track changes and improvements and must be mentioned when ordering parts or requesting service. For your convenience, a space has been provided inside the front cover of this manual to record the serial number, model number, purchase date, and dealer name.

Model No: TLG10R

Serial No: _____

Date Purchased: _____

Dealer Name: _____



Warranty and Limitation of Liability

All equipment is sold subject to mutual agreement that it is warranted by the company to be free from defects of materials and workmanship. But the company shall not be liable for special, indirect or consequential, damages of any kind under this contract or otherwise. The company's liability shall be limited exclusively to replacing or repairing without charge, at its factory or elsewhere, at its discretion.

Any material, or workmanship defects which become apparent within one year from the date on which the equipment was purchased, and the company shall have no liability for damages of any kind. The buyer by the acceptance of the equipment will assume all liability for any damages, which may result from the use or misuse by his employees or others.

Table of Contents

| Parts Manual | |
|---|-----------|
| Parts Manual Usage | |
| Section 1 - Specifications 1-1 | |
| Dimensions 1-1 Ferminology 1-2 Drientation 1-3 Bale Sizes 1-3 | 2 |
| Section 2 - Parts Breakdowns & Lists 2-1 | 1 |
| Decal Locations | 3 1 |
| Forque Value Chart - Imperial VI | I |
| Forque Value Chart - Metric VII | I |

Intentionally Left Blank

Section 1 - Parts Breakdowns & Lists



| ITEM | QTY | PART NUMBER | DESCRIPTION |
|------|-----|-------------|--|
| 1 | 1 | DE41713H | ISO Decal - High Pressure Fluid Horizontal |
| 2 | 1 | DE41714H | ISO Decal - Read OM Horizontal |
| 3 | 1 | DE42784H | ISO Decal - Read OM Decal Section Horizontal |
| 4 | 1 | DE46097 | ISO Decal - Crush from Above |
| 5 | 1 | DE49411 | Accumul8 Retriever Model Decal |
| 6 | 1 | DE49412 | Tubeline Decal 14.6in x 2.7in |
| 7 | 1 | DE49413 | Tubeline Decal 10.8in x 2in |
| 8 | 1 | DE49414 | TLGR10R Model Decal |
| 9 | 1 | DECANADA | Decal Made In Canada |

Part No: DE41713H Item: 1

Do not use hand to check for hydraulic leaks, alternatively use a piece of cardboard.



Part No: DE42784H Item: 3

Read Operator's manual decal section to understand safety decals.



Part No: DE41714H Item: 2

Read this manual and learn the machine functions before attempting to operate it.



Part No: DE46097 Item: 4

Read Operator's manual decal section to understand safety decals.







Part No: DE49412, DE49413 Item: 6,7



Part No: DE49411 Item: 5

Model decal.

Part No: DECANADA Item: 9

Manufacturer's country of origin.

Part No: DE9414 Item: 8

TLG10R - Section 1 - Parts Breakdowns & Lists



| ITEM | QTY | PART NUMBER | DESCRIPTION |
|------|-----|-----------------|---|
| 1 | 3 | 25680 | Linch Pin 3/16 X 1.5 |
| 2 | 1 | 80244 | Pin |
| 3 | 2 | 80245 | Side Pin |
| 4 | 2 | 80271 | Center Guide |
| 5 | 1 | 80272 | Right Bale Guide |
| 6 | 1 | 80276 | Left Bale Guide |
| 7 | 2 | 80278 | Inside Guide |
| 8 | 2 | FW 1/2 | Flatwasher - 1/2" Zinc Plated USS |
| 9 | 1 | HB1/2-13X3.25Z5 | Hex Bolt 1/2-13x3 1/4 Grade 5 Zinc Plated Hex Cap Screw |
| 10 | 5 | LN1/2-13NCZ5 | LN 1/2-13 Zinc Plated Nylon Insert Lock Nut |

Section 1 - Parts Breakdowns & Lists - TLG10R

Bale Hooks



| ITEM | QTY | PART NUMBER | DESCRIPTION |
|------|-----|-----------------|---|
| 1 | 1 | 80248 | Frame |
| 2 | 40 | AC-0006G-004 | UV Resistant UHMW Bushing |
| 3 | 24 | AC-0006G-005 | Hook |
| 4 | 1 | AC-1006G-02 | Cylinder Mount |
| 5 | 5 | AC-1006G-AG-03 | Left Grabber Pivot |
| 6 | 5 | AC-1006G-AG-04 | Right Grabber Pivot |
| 7 | 20 | FW 1/2 | Flatwasher - 1/2" Zinc Plated USS |
| 8 | 24 | HB1/2-13X2.5Z5 | Hex Bolt 1/2-13x2 1/2 Grade 5 Zinc Plated Hex Cap Screw |
| 9 | 10 | HB1/2-13X2Z5 | Hex Bolt 1/2-13x2 Grade 5 Zinc Plated Hex Cap Screw |
| 10 | 40 | HB1/4-20X2.25Z5 | Hex Bolt 1/4-20x2 1/4 Grade 5 Zinc Plated Hex Cap Screw |
| 11 | 38 | LN1/2-13NCZ5 | LN 1/2-13 Zinc Plated Nylon Insert Lock Nut |
| 12 | 39 | LN1/4-20NCZ5 | LN 1/4-20 Zinc Plated Nylon Insert Lock Nut |
| 13 | 1 | TL500-100-082 | HYS 25AGU08-ASAE-10 |
| 14 | 1 | SK AGU251125-10 | Seal Kit for 25 Series Cylinder |

Torque Value Chart - Imperial

| SAE Grade and Head Markings | NO MARK | 1 or 2 ^b | |
|---|---------|---------------------|--|
| SAE Grade and Nut Markings | NO MARK | 2 | |

| Grade 1 | | | | | Grade 2 ^b | | | | Grade 5, 5.1, or 5.2 | | | | Grade 8 or 8.2 | | | |
|---------|-------|--------------------|------|--------------|----------------------|--------------------|------|-----------------|----------------------|--------------------|------|--------------|----------------|--------------------|------|--------------|
| Size | Lubri | cated ^a | Dr | ' y a | Lubri | cated ^a | Dr | .À _a | Lubri | cated ^a | Di | ' y a | Lubri | cated ^a | Di | r y a |
| | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft |
| 1/4 | 3.7 | 2.8 | 4.7 | 3.5 | 6 | 4.5 | 7.5 | 5.5 | 9.5 | 7 | 12 | 9 | 13.5 | 10 | 17 | 12.5 |
| 5/16 | 7.7 | 5.5 | 10 | 7 | 12 | 9 | 15 | 11 | 20 | 15 | 25 | 18 | 28 | 21 | 35 | 26 |
| 3/8 | 14 | 10 | 17 | 13 | 22 | 16 | 27 | 20 | 35 | 26 | 44 | 33 | 50 | 36 | 63 | 46 |
| 7/16 | 22 | 16 | 28 | 20 | 35 | 26 | 44 | 32 | 55 | 41 | 70 | 52 | 80 | 58 | 100 | 75 |
| 1/2 | 33 | 25 | 42 | 31 | 53 | 39 | 67 | 50 | 85 | 63 | 110 | 80 | 120 | 90 | 150 | 115 |
| 9/16 | 48 | 36 | 60 | 45 | 75 | 56 | 95 | 70 | 125 | 90 | 155 | 115 | 175 | 130 | 225 | 160 |
| 5/8 | 67 | 50 | 85 | 62 | 105 | 78 | 135 | 100 | 170 | 125 | 215 | 160 | 240 | 175 | 300 | 225 |
| 3/4 | 120 | 87 | 150 | 110 | 190 | 140 | 240 | 175 | 300 | 225 | 375 | 280 | 425 | 310 | 550 | 400 |
| 7/8 | 190 | 140 | 240 | 175 | 190 | 140 | 240 | 175 | 490 | 360 | 625 | 450 | 700 | 500 | 875 | 650 |
| 1 | 290 | 210 | 360 | 270 | 290 | 210 | 360 | 270 | 725 | 540 | 925 | 675 | 1050 | 750 | 1300 | 975 |
| 1-1/8 | 400 | 300 | 510 | 375 | 400 | 300 | 510 | 375 | 900 | 675 | 1150 | 850 | 1450 | 1075 | 1850 | 1350 |
| 1-1/4 | 570 | 425 | 725 | 530 | 570 | 425 | 725 | 530 | 1300 | 950 | 1650 | 1200 | 2050 | 1500 | 2600 | 1950 |
| 1-3/8 | 750 | 550 | 950 | 700 | 750 | 550 | 950 | 700 | 1700 | 1250 | 2150 | 1550 | 2700 | 2000 | 3400 | 2550 |
| 1-1/2 | 1000 | 725 | 1250 | 925 | 990 | 725 | 1250 | 930 | 2250 | 1650 | 2850 | 2100 | 3600 | 2650 | 4550 | 3350 |

DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.

Fasteners should be replaced with the same or higher grade. If higher grade fasteners are used, these should only be tightened to the strength of the original.

Make sure fasteners threads are clean and that you properly start thread engagement. This will prevent them from failing when tightening.

Tighten plastic insert or crimped steel-type lock nuts to approximately 50 percent of the dry torque shown in the chart, applied to the nut, not to the bolt head. Tighten toothed or serrated-type lock nuts to the full torque value.

^a "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. "Dry" means plain or zinc plated without any lubrication.

^b Grade 2 applies for hex cap screws (not hex bolts) up to 152 mm (6-in.) long. Grade 1 applies for hex cap screws over 152 mm (6-in.) long, and for all other types of bolts and screws of any length.

Torque Value Chart - Metric

| | 4.8 | 8.8 9.8 | 10.9 | 12.9 |
|--|-----|-------------------|------|------------------------------|
| Property Class and Head Markings | | 8.8 9.8 8.8 9.8 | | 12.9 12.9 12.9 12.9 |
| Property Class and Nut Markings | | | | |

| | | Clas | ss 4.8 | | Class 8.8 or 9.8 | | | Class 10.9 | | | | Class 12.9 | | | | | |
|------|-------------------------|-------|--------|-------|-------------------------|-------|------|------------|------|-------------------------|------|------------|------|-------------------------|------|------------------|--|
| Size | Lubricated ^a | | Dryª | | Lubricated ^a | | Di | Dryª | | Lubricated ^a | | Dryª | | Lubricated ^a | | Dry ^a | |
| | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | |
| M6 | 4.8 | 3.5 | 6 | 4.5 | 9 | 6.5 | 11 | 8.5 | 13 | 9.5 | 17 | 12 | 15 | 11.5 | 19 | 14.5 | |
| M8 | 12 | 8.5 | 15 | 11 | 22 | 16 | 28 | 20 | 32 | 24 | 40 | 30 | 37 | 28 | 47 | 35 | |
| M10 | 23 | 17 | 29 | 21 | 43 | 32 | 55 | 40 | 63 | 47 | 80 | 60 | 75 | 55 | 95 | 70 | |
| M12 | 40 | 29 | 50 | 37 | 75 | 55 | 95 | 70 | 110 | 80 | 140 | 105 | 130 | 95 | 165 | 120 | |
| M14 | 63 | 47 | 80 | 60 | 120 | 88 | 150 | 110 | 175 | 130 | 225 | 165 | 205 | 150 | 260 | 190 | |
| M16 | 100 | 73 | 125 | 92 | 190 | 140 | 240 | 175 | 275 | 200 | 350 | 255 | 320 | 240 | 400 | 300 | |
| M18 | 135 | 100 | 175 | 125 | 260 | 195 | 330 | 250 | 375 | 275 | 475 | 350 | 440 | 325 | 560 | 41(| |
| M20 | 190 | 140 | 240 | 180 | 375 | 275 | 475 | 350 | 530 | 400 | 675 | 500 | 625 | 460 | 800 | 580 | |
| M22 | 260 | 190 | 330 | 250 | 510 | 375 | 650 | 475 | 725 | 540 | 925 | 675 | 850 | 625 | 1075 | 800 | |
| M24 | 330 | 250 | 425 | 310 | 650 | 475 | 825 | 600 | 925 | 675 | 1150 | 850 | 1075 | 800 | 1350 | 100 | |
| M27 | 490 | 360 | 625 | 450 | 950 | 700 | 1200 | 875 | 1350 | 1000 | 1700 | 1250 | 1600 | 1150 | 2000 | 150 | |
| M30 | 675 | 490 | 850 | 625 | 1300 | 950 | 1650 | 1200 | 1850 | 1350 | 2300 | 1700 | 2150 | 1600 | 2700 | 200 | |
| M33 | 900 | 675 | 1150 | 850 | 1750 | 1300 | 2200 | 1650 | 2500 | 1850 | 3150 | 2350 | 2900 | 2150 | 3700 | 275 | |
| M36 | 1150 | 850 | 1450 | 1075 | 2250 | 1650 | 2850 | 2100 | 3200 | 2350 | 4050 | 3000 | 3750 | 2750 | 4750 | 350 | |

DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical property class.

Fasteners should be replaced with the same or higher property class. If higher property class fasteners are used, these should only be tightened to the strength of the original.

Make sure fasteners threads are clean and that you properly start thread engagement. This will prevent them from failing when tightening.

Tighten plastic insert or crimped steel-type lock nuts to approximately 50 percent of the dry torque shown in the chart, applied to the nut, not to the bolt head. Tighten toothed or serrated-type lock nuts to the full torque value.

a "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. "Dry" means plain or zinc plated without any lubrication.

Index

| Bale Guides |
|--------------------------------------|
| Bale Hooks |
| Decal Locations |
| Decals |
| Manuals |
| Part Orders |
| Parts Manual |
| Parts Manual Usage |
| Section 1 - Parts Breakdowns & Lists |
| erial Number |
| orque Value Chart - Imperial |
| orque Value Chart - Metric |
| Varranty and Limitation of Liability |

